

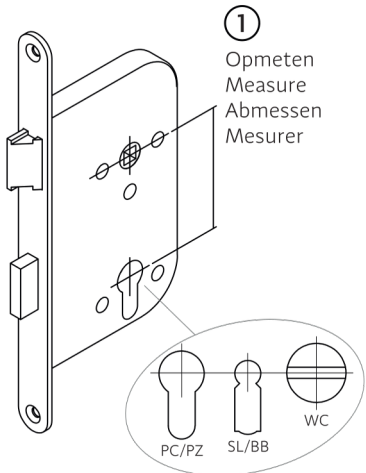
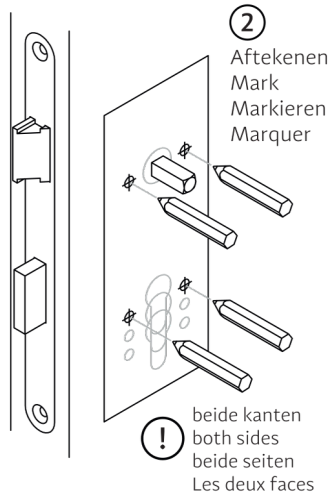
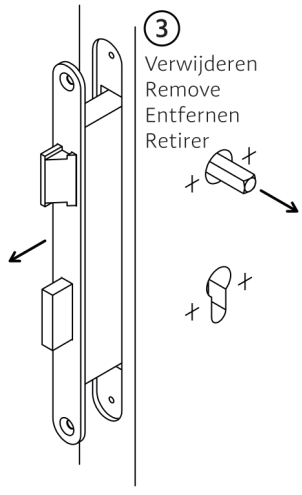
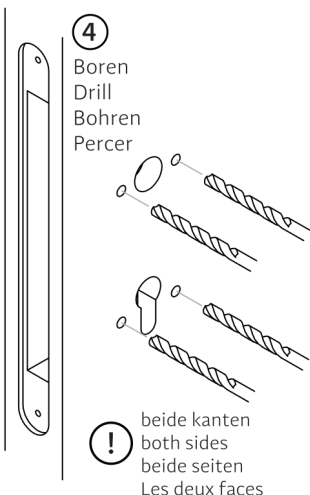
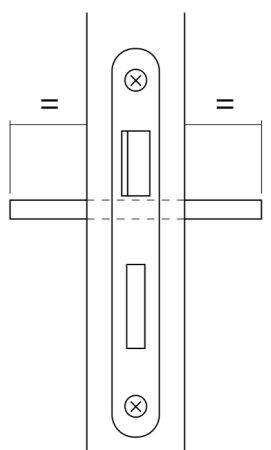
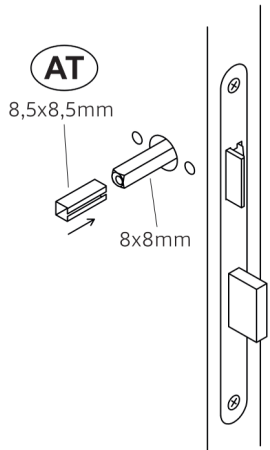
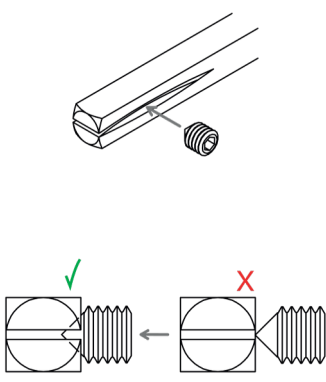


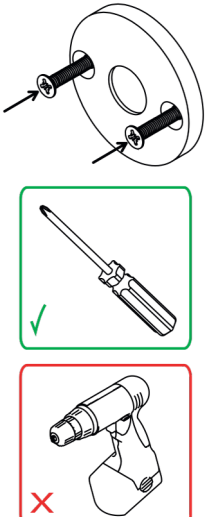

Montagehandleiding **ODShop collectie**

ASSEMBLY INSTRUCTION - MONTAGEANLEITUNG - MODE D'EMPLOI


 1 Opmeten Measure Abmessen Mesurer	 2 Aftekenen Mark Markieren Marquer ! beide kanten both sides beide seiten Les deux faces	 3 Verwijderen Remove Entfernen Retirer
 4 Boren Drill Bohren Percer ! beide kanten both sides beide seiten Les deux faces	Stift positie - Spindle position Stift Position - Position tige 	Österreich - Oostenrijk Austria - Autriche AT 8,5x8,5mm 8x8mm 
		

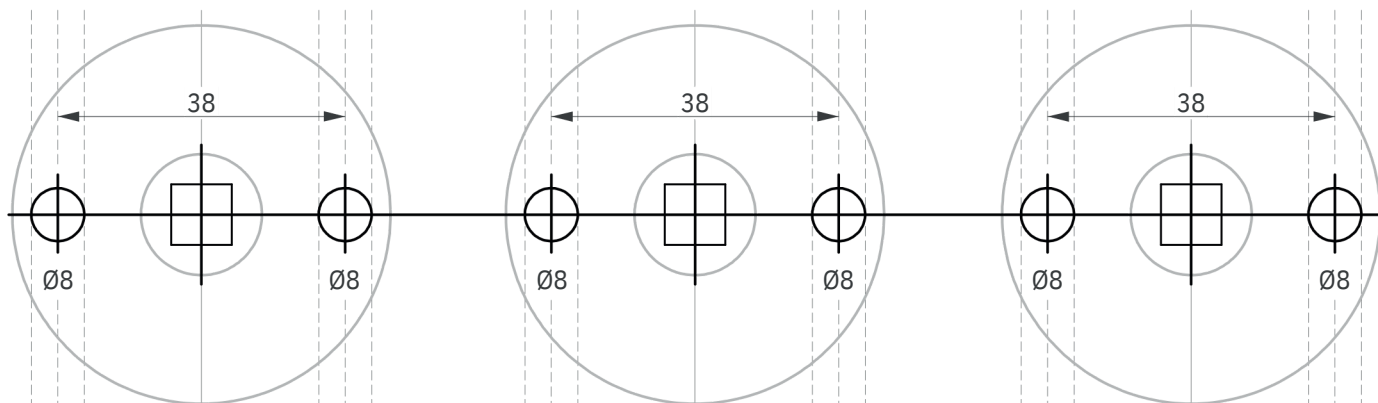

PC/PZ

SL/BB

WC

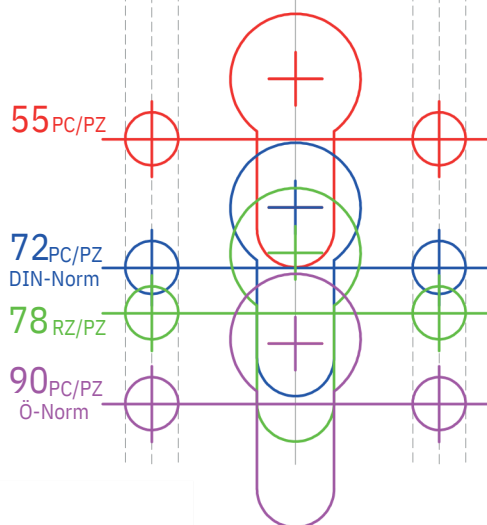


55_{PC/PZ}

72_{PC/PZ}
DIN-Norm

78_{RZ/PZ}

90_{PC/PZ}
Ö-Norm

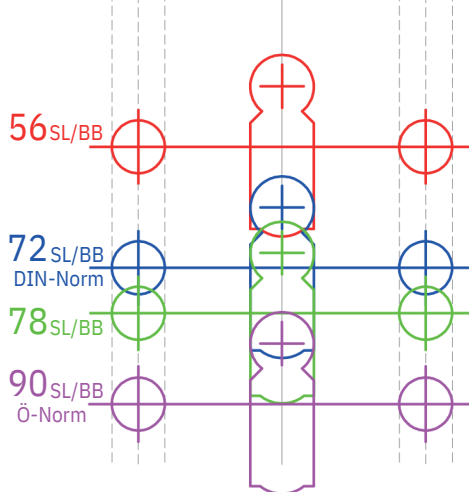


56_{SL/BB}

72_{SL/BB}
DIN-Norm

78_{SL/BB}

90_{SL/BB}
Ö-Norm

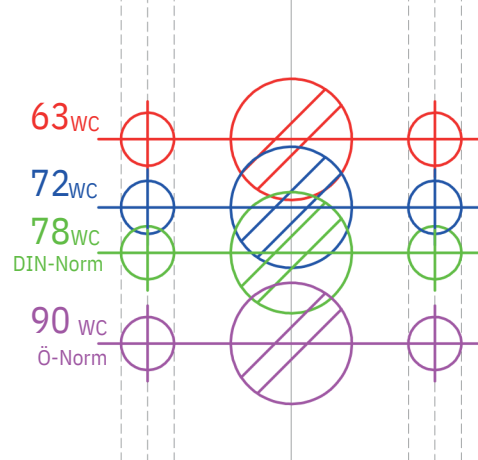


63_{WC}

72_{WC}

78_{WC}
DIN-Norm


90_{WC}
Ö-Norm

Montage met M4 boutjes
Assembly with threaded screws
Montage mit Gewindeschrauben
Mode d'emploi avec vis filetées

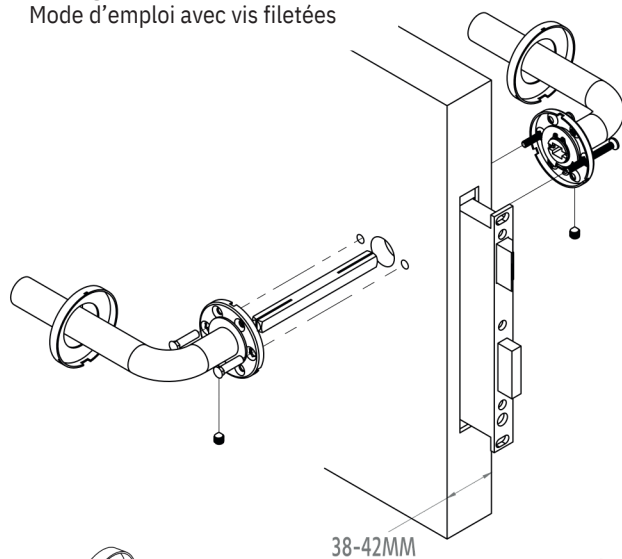

38-42MM

Montage met houtschroeven
Assembly with woodscrews
Montage mit Holzschrauben
Mode d'emploi avec vis à bois

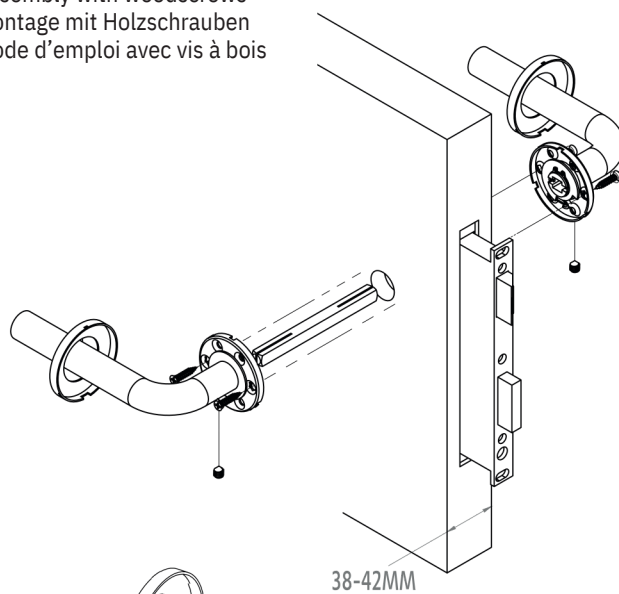

38-42MM

